

MODEL HSC-143, HSC-145, HSC-630, HSC-660

COMPLETE SHOWER CABINET PHYSICALLY CHALLENGED TRANSFER MODELS

We suggest a floor drain at the entrance to this model. Terrazzo floor has stainless steel cap and 1/2" entry when installed according to instruction. Standard wall finish is white powder coated metal. Includes S-140-SS pressure balanced valve, with separate stops. Hand held showerhead with swivel fitting, 69" flexible C.P. brass hose, and in-line vacuum breaker. Stainless steel curtain rod, GSA approved curtain. Retractable handicapped shower seat with stainless steel frame. Two stainless steel grab bars with concealed mounting.



• Specify R or L hand drilling



(Shown above) Model HSC-143



ORDERING OPTIONS -

Part Number

HSC-XXX-

Optional

☐ **SC-TC:** Top Only

☐ **SC-7:** Corner filler strip

☐ **SC-JFS:** Joint filler strip*

☐ **FB:** Filler block*

☐ **SC-140-TCV:** Thermostatic valve

☐ **DC:** Attached dressing compartment*

☐ **SC-TDG:** Shower door (N/A SC-40)

*Layout sketch required

A maximum of 3 options may be added

Optional Wall Finishes

☐ **SS:** Stainless steel

☐ **SPC:** Solid phenolic core *

☐ **HDP:** High density polymer*

DIMENSIONS -

All dimensions subject to manufacturing variance of plus or minus 1/4" (6 mm)


HSC-143 40x40x82"

HSC-145 40x48x82"

HSC-630 65x33x82"

HSC-660 65x39x82"



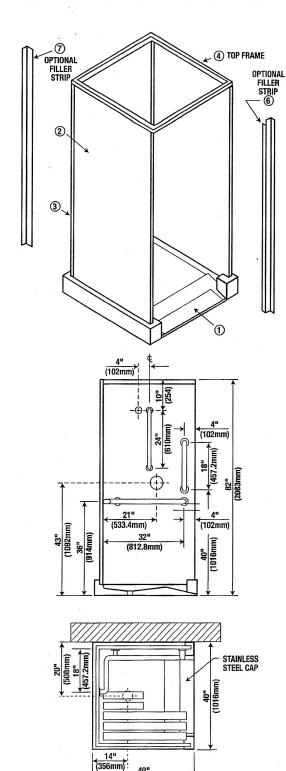


(1016mm)

STANDARD EQUIPMENT FOR FIELD INSTALLATION

KEY		
NO.	QTY.	DESCRIPTION
1	1	40" X 40" BASE
2	3	36-9/16" X 77-3/16" PANEL
3	2	CORNER JOINT
4	1	TOP FRAME
_	1	ROD AND CURTAIN
=	1	PRESSURE BALANCED VALVE WITH STOPS
_	1	HAND HELD SHOWER HEAD WITH SWIVEL
		CONNECTOR, SUPPLY ELL, VACUUM BREAKER
		AND 69" C.P. FLEXIBLE BRASS HOSE
_	1	24" C.P. BRASS SLIDE BAR WITH
		ADJUSTABLE SHOWER HEAD MOUNTING
		BRACKET AND MOUNTING SCREWS.
_	1	HORIZONTAL WRAP AROUND STAINLESS
		STEEL GRAB BAR
_	1	VERTICAL STAINLESS STEEL GRAB BAR
_	1	RETRACTABLE HANDICAPPED SHOWER
		SEAT WITH STAINLESS STEEL FRAME
	1	and the same of th


FOR CORRECT INSTALLATION:

- 1. ESTABLISH PROPER CLEARANCE BETWEEN SHOWER BASE AND WALLS.
- 2. SET SHOWER BASE ON MORTAR BED AND CAREFULLY LEVEL TO AVOID PROBLEMS OF UNEVEN SUB FLOOR.



- This style floor was designed to be set 1/4" deep from the top of the finished floor.
- 2. It is recommend that a floor drain at or near the entrance be included.
- 3. Collapsible water dam available (-RDM)



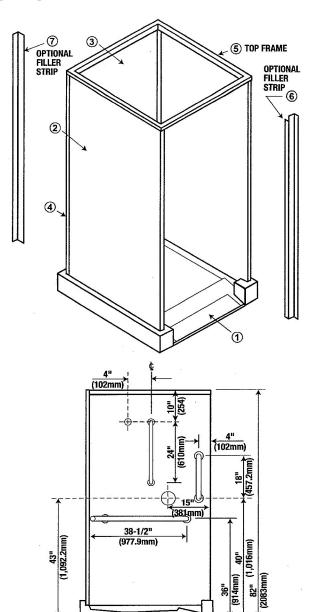



STANDARD EQUIPMENT FOR FIELD INSTALLATION

KEY NO.	QTY.	DESCRIPTION
1	1	40" X 48" BASE
- 2	, 2	44-9/16" X 77-3/16" PANEL
3	1	35-5/8" X 77-3/16" BACK PANEL
4	2	CORNER JOINT
5	1	TOP FRAME
_	1	ROD AND CURTAIN
_	1	PRESSURE BALANCED VALVE WITH STOPS
_	1	HAND HELD SHOWER HEAD WITH SWIVEL
		CONNECTOR, SUPPLY ELL, VACUUM BREAKER
		AND 69" C.P. FLEXIBLE BRASS HOSE
-	1	24" C.P. BRASS SLIDE BAR WITH
		ADJUSTABLE SHOWER HEAD MOUNTING
		BRACKET AND MOUNTING SCREWS.
-	1	HORIZONTAL WRAP AROUND STAINLESS
		STEEL GRAB BAR
_	1	VERTICAL STAINLESS STEEL GRAB BAR
_	1	RETRACTABLE HANDICAPPED SHOWER
		SEAT WITH STAINLESS STEEL FRAME

FOR CORRECT INSTALLATION:

- ESTABLISH PROPER CLEARANCE BETWEEN SHOWER BASE AND WALLS.
- 2. SET SHOWER BASE ON MORTAR BED AND CAREFULLY LEVEL TO AVOID PROBLEMS OF UNEVEN SUB FLOOR.

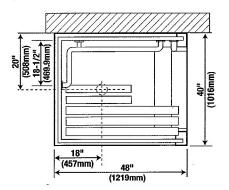






SECTION THRU SHOWER FLOOR

- This style floor was designed to be set 1/4" deep from the top of the finished floor.
- 2. It is recommend that a floor drain at or near the entrance be included.



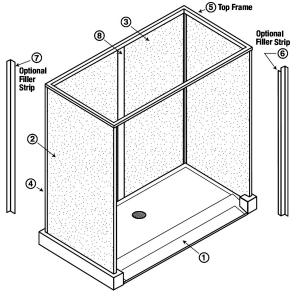

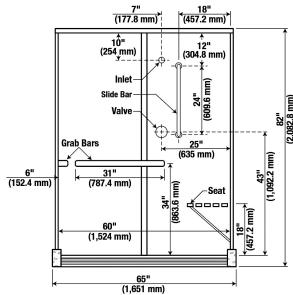

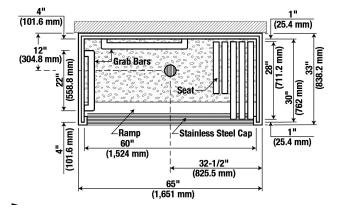

STANDARD EQUIPMENT FOR FIELD INSTALLATION

KEY		
<u>NO.</u>	QIY.	DESCRIPTION
_1	1	65" X 33" BASE
2	2	30" X 77-3/16" PANEL
3	1	60" X 77-3/16" BACK PANEL
4	2	CORNER JOINT
5	1	TOP FRAME
	1	ROD AND CURTAIN
_	1	PRESSURE BALANCED VALVE WITH STOPS
_	1	HAND HELD SHOWER HEAD WITH SWIVEL
		CONNECTOR, SUPPLY ELL, VACUUM BREAKER
		AND 69" C.P. FLEXIBLE BRASS HOSE
_	1	24" C.P. BRASS SLIDE BAR WITH
		ADJUSTABLE SHOWER HEAD MOUNTING
		BRACKET AND MOUNTING SCREWS.
_	2	HORIZONTAL STAINLESS STEEL GRAB BAR
8	1	CHANNEL BRACKET
_	1	RETRACTABLE HANDICAPPED SHOWER
		SEAT WITH STAINLESS STEEL FRAME

FOR CORRECT INSTALLATION:


- ESTABLISH PROPER CLEARANCE BETWEEN SHOWER BASE AND WALLS.
- 2. SET SHOWER BASE ON MORTAR BED AND CAREFULLY LEVEL TO AVOID PROBLEMS OF UNEVEN SUB FLOOR.





SECTION THRU SHOWER FLOOR

- 1. This style floor was designed to be set 1/4" deep from the top of the finished floor.
- 2. It is recommend that a floor drain at or near the entrance be included.
- 3. Collapsible water dam available (-RDM)



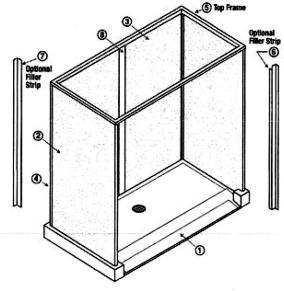

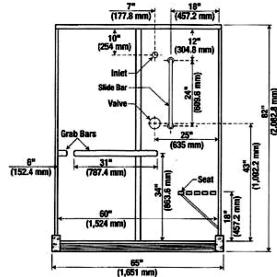

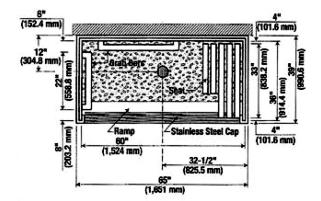

STANDARD EQUIPMENT FOR FIELD INSTALLATION

KEY NO.	QTY.	DESCRIPTION
1	1	65" X 39" BASE
2	2	36" X 77-3/16" PANEL
3	1	60" X 77-3/16" BACK PANEL
4	2	CORNER JOINT
5	1	TOP FRAME
_	1	ROD AND CURTAIN
_	1	PRESSURE BALANCED VALVE WITH STOPS
_	1	HAND HELD SHOWER HEAD WITH SWIVEL
		CONNECTOR, SUPPLY ELL, VACUUM BREAKER
		AND 69" C.P. FLEXIBLE BRASS HOSE
-	1	24° C.P. BRASS SLIDE BAR WITH
		ADJUSTABLE SHOWER HEAD MOUNTING
	1	BRACKET AND MOUNTING SCREWS.
_	2	HORIZONTAL STAINLESS STEEL GRAB BAR
8	1	CHANNEL BRACKET
-	1	RETRACTABLE HANDICAPPED SHOWER
		SEAT WITH STAINLESS STEEL FRAME

FOR CORRECT INSTALLATION:

- ESTABLISH PROPER CLEARANCE BETWEEN SHOWER BASE AND WALLS.
- SET SHOWER BASE ON MORTAR BED AND CAREFULLY LEVEL TO AVOID PROBLEMS OF UNEVEN SUB FLOOR.



- This style floor was designed to be set 1/4" deep from the top of the finished floor.
- It is recommend that a floor drain at or near the entrance be included.
- 3. Collapsible water dam available (-RDM)