

INSTALLATION INSTRUCTIONS

BP Back Panels



Thank you for selecting Stern-Williams. To ensure this product is installed properly, please read these instructions carefully before you begin. (Certain installations may require professional help.)

IMPORTANT: When installing Stern-Williams Back Panels, observe local plumbing and building codes.

PREPARATION

- **NOTE:** Before installing the back panels, the mop sink must be installed first.
- Refer to “Rough-In” dimensions and determine where the Stern-Williams back panels will be installed. (See below).
- Ensure the walls where the back panels will sit are free of debris and dry.
- Screws and wall anchors are provided.

INSTALLATION

Note: If there are multiple panels a corner bracket will also be included. A typical setup will have two panels and the corner bracket as shown in Figure 1.

1. Align the panels with the top of the mop sink and mark the mounting hole locations.
 - a. Alignment of the panel should be flush with the top surface of the mop sink and flush with other back panels it meets in the corner.
2. Use the provided mounting hardware to secure the back panels.
 - a. The corner bracket fits behind the back panels as shown in Figure 2.
3. It is recommended but not required to apply a bead of silicone along the base of the panels along the mop sink and where multiple panels meet.

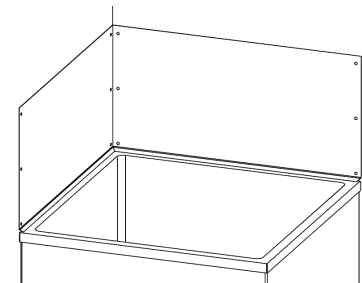


Figure 1


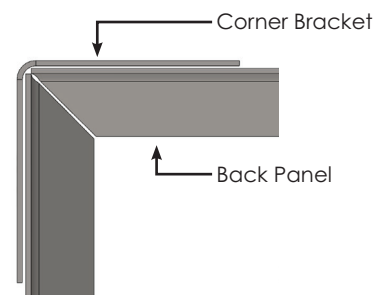


Figure 2

ROUGH-IN-DIMENSIONS

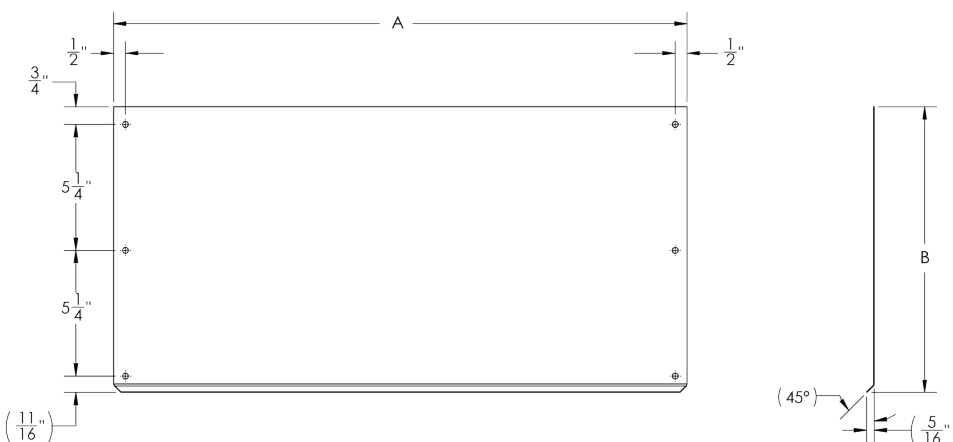

MODEL	A (in)	B (in)
BP-1-24	24	12
BP-2-24	24	12
BP-2-2436	24,36	12
BP-2-28	28	12
BP-2-32	32	12
BP-2-26	36	12
BP-3-24	24	12