

INSTALLATION INSTRUCTIONS

Field Installable Tiling Flange (FITF)

Models: FITF-24, FITF-36



Thank you for selecting Stern-Williams. To ensure this product is installed properly, please read these instructions carefully before you begin. (Certain installations may require professional help.)

IMPORTANT: When installing Stern-Williams model FITF-XX, follow local plumbing and building codes.

The purpose of this flange is to ensure no moisture leaks behind the mop sink which could lead to water damage or mold.

PREPARATION

- Prepare the terrazzo surface for tape, ensuring that it is clean by wiping down the area with mineral spirits and/or alcohol. Make sure the area is dry and free of debris.


INSTALLATION

1. Peel off the tape backing from strip supplied on tiling flange.
2. Apply to terrazzo surface with flange extending at least 1" from the product's top face.
3. Firmly press along the entire taped area.
4. A bead of caulk should be placed along the top joint between the flange and the mop sink. Caulk corner seams.
5. After the wall or tile is installed to cover the flange, caulk between the wall and mop sink.

Step 1: Remove Film




Step 2: Apply

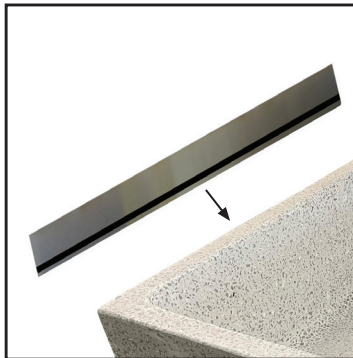

Step 3: Final Product




DIMENSIONS

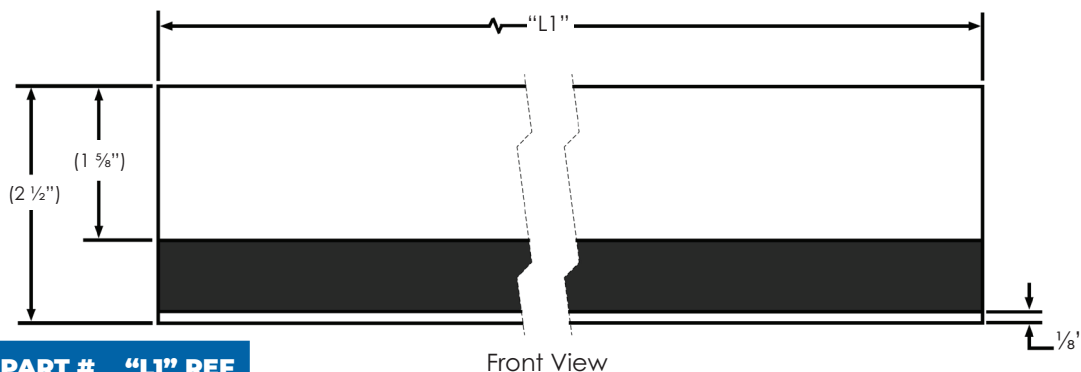

Front View

Material Used:
304 Stainless Steel

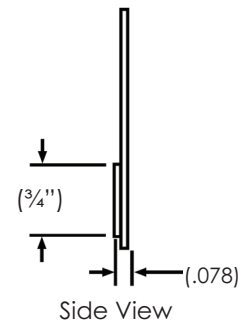

Side View

PART #	"L1" REF
FITF-24	24"
FITF-36	36"