

SHOWER CABINET INSTALLATION INSTRUCTIONS

*Models: SC-32, SC-36, SC-38, SC-39, SC-40, HSC-143,
HSC-145, HSC-400, HSC-430, HSC-460, HSC-630, HSC-660*



Thank you for selecting Stern-Williams. To ensure this product is installed properly, please read these instructions carefully before you begin. (Certain installations may require professional help.)

IMPORTANT: When installing Stern-Williams Shower Cabinets, observe local plumbing and building codes.

PREPARATION

- Please read all instructions and study drawings before beginning

INSTALLATION


1. Check shower base carefully for any damage. By wetting the face of the floor with water, any cracks will appear as water is absorbed in crack.
Determine proper location of base, being sure there is correct clearance between base and wall. Base must be leveled on a solid bed of mortar for proper drainage and elimination of stresses caused by uneven sub-floor.
2. Wall panels have labels, which indicate where they are placed on shower base. Assemble wall panels on shower base with comer joints provided. Bottom of corner joint aligns with bottom of wall panels.
3. On HSC-143, HSC-145, HSC-400, HSC-430, HSC-460, HSC-630 and HSC-660 models, mount grab bars with disc and screws provided. Assemble hand held shower head and attach slide bar to panel with screws provided. Assemble supply piping to mixing valve and shower head in accordance with instructions included with valve.
4. On SC-32, SC-36, SC-38, SC-39 and SC-40 models, follow procedure outlined in step three to install wall panels. Assemble supply pipe to mixing valve and shower head in accordance with instructions included with valve.
5. Install Top Cap, making sure the underside with filler strip is placed over the door.
6. If Top Cover or Top Cover with lights is furnished, install with screws provided.
7. If Filler Strips are provided, drill as shown in figures 1 and 2 and install with screws (furnished by others).
8. If Shower Door is furnished, mount in accordance with instructions included with door.
9. Install curtain rod and curtain with screws provided. If desired, the rod holders can be positioned to anchor top cap in place.
10. Apply a small bead of quality waterproof caulking (not furnished) on outside of panels where they meet the shower base.
11. Care should be taken with torches when installing plumbing, since material may be permanently marred by intense heat.

SHOWER CABINET INSTALLATION INSTRUCTIONS



HSC-143, 145, & 400 SHOWER INSTALLATION

- # $\frac{1}{4}$ x $\frac{1}{2}$ " Stainless Steel Screw (TYP)
- 8 Required for Top Cap
- Use $\frac{13}{16}$ " Drill Bit

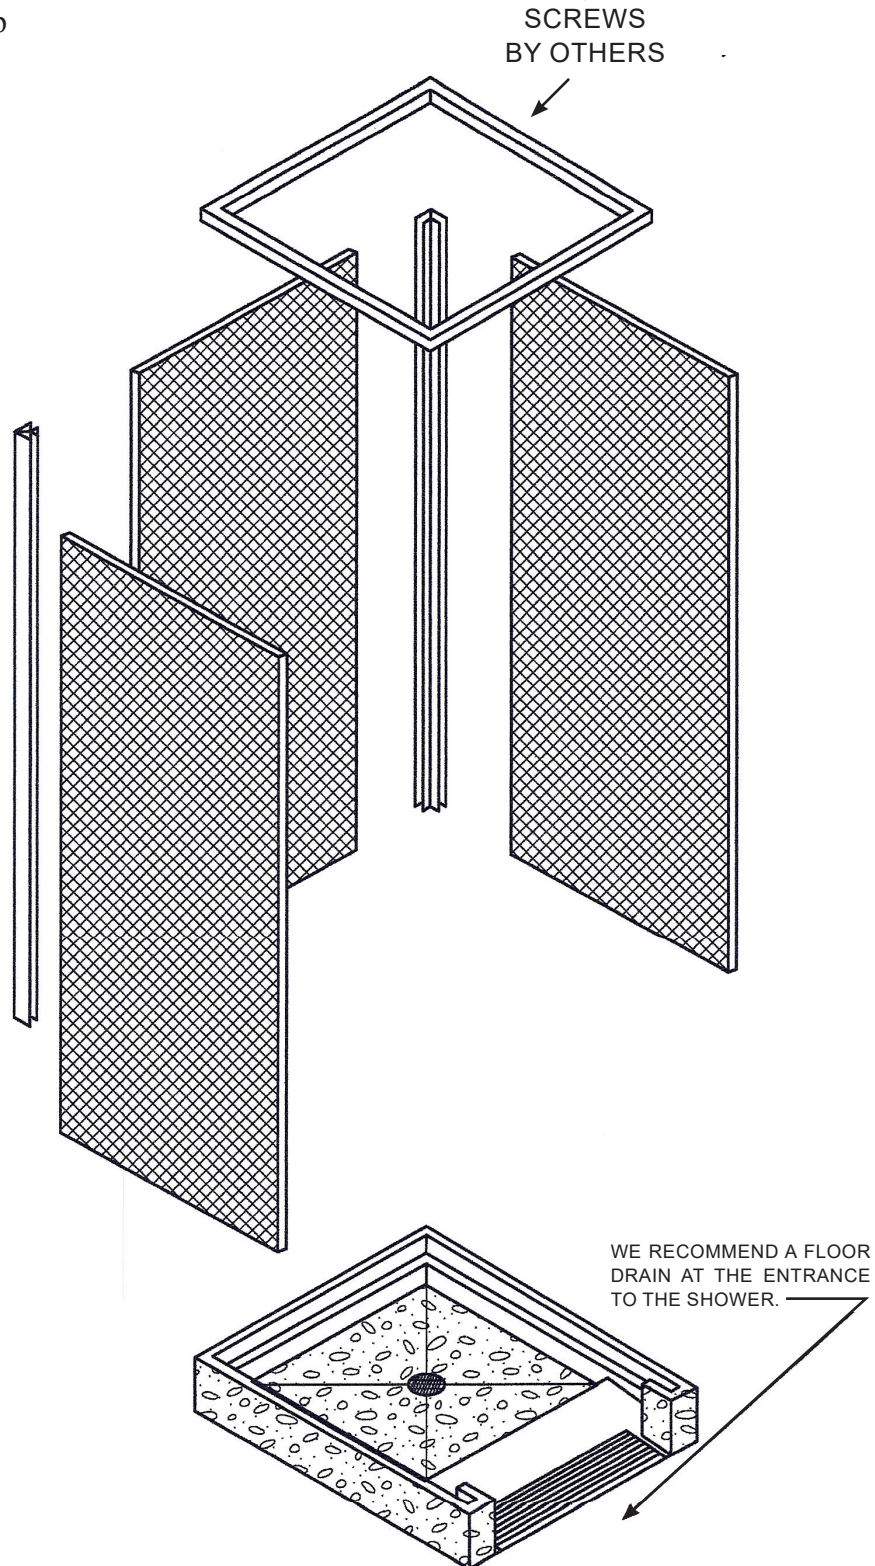

SHOWER CABINET INSTALLATION INSTRUCTIONS




HSC-430, 460, 630, & 660 SHOWER INSTALLATION

- # 1/4 x 1/2" Stainless Steel Screw (TYP)
- 8 Required for Top Cap
- Use 13/16" Drill Bit

SCREWS
BY OTHERS

ATTACH SHOWER PANELS WITH
"H" CHANNELS IN FIELD, (STACK
TWO H CHANNELS - FIELD CUT
FROM 54") USE 1" THRU BOLTS

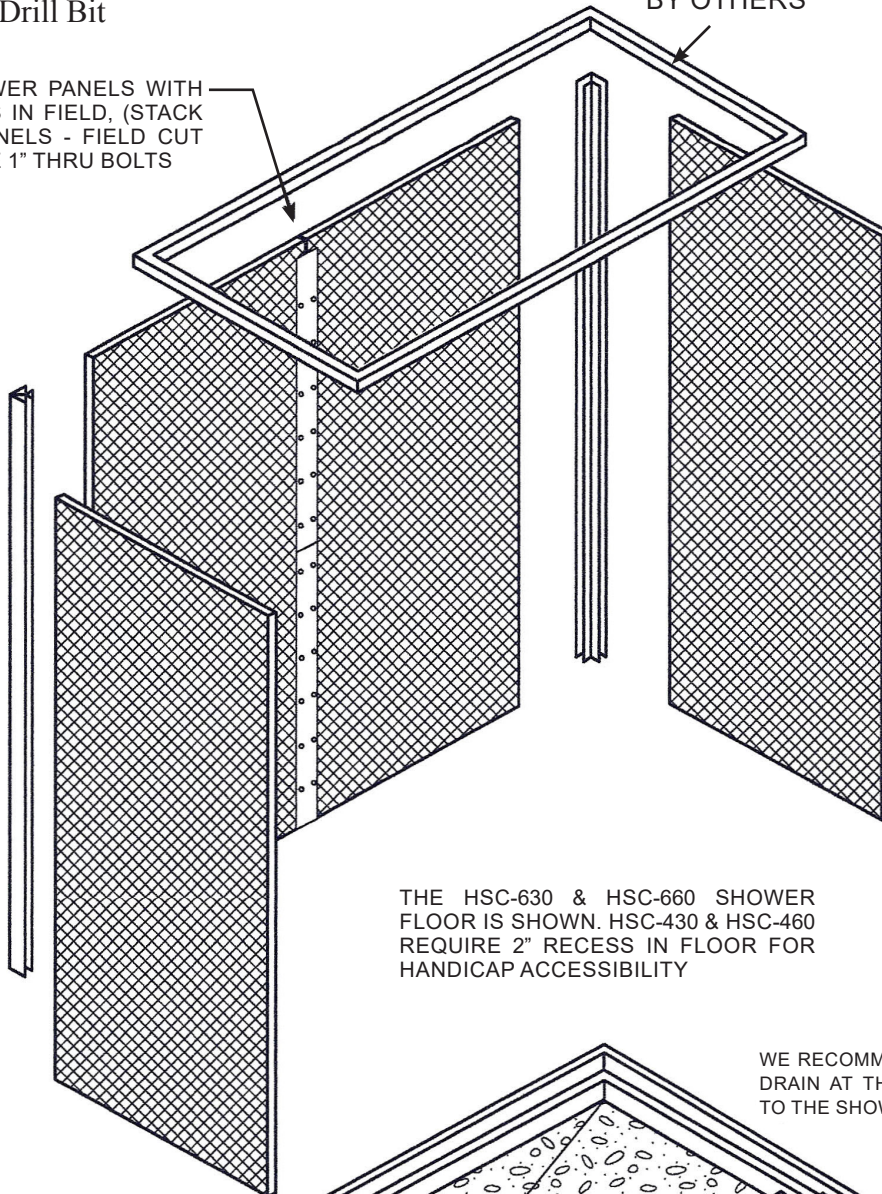

THE HSC-630 & HSC-660 SHOWER
FLOOR IS SHOWN. HSC-430 & HSC-460
REQUIRE 2" RECESS IN FLOOR FOR
HANDICAP ACCESSIBILITY

WE RECOMMEND A FLOOR
DRAIN AT THE ENTRANCE
TO THE SHOWER.

SHOWER CABINET INSTALLATION INSTRUCTIONS




HSC-430, 460, 630, & 660 SHOWER INSTALLATION

- # 1/4 x 1/2" Stainless Steel Screw (TYP)
- 8 Required for Top Cap
- Use 13/16" Drill Bit

SCREWS
BY OTHERS

ATTACH SHOWER PANELS WITH
"H" CHANNELS IN FIELD, (STACK
TWO H CHANNELS - FIELD CUT
FROM 54") USE 1" THRU BOLTS

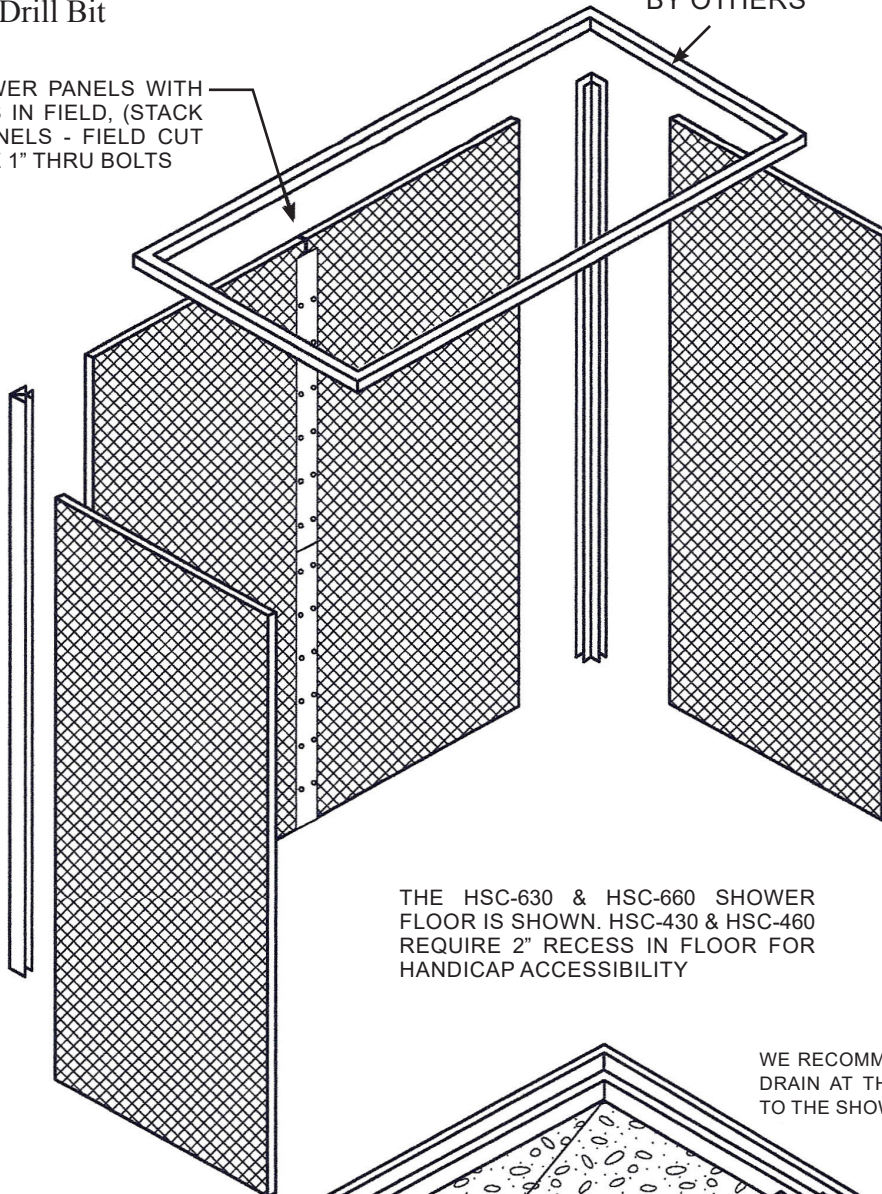

THE HSC-630 & HSC-660 SHOWER
FLOOR IS SHOWN. HSC-430 & HSC-460
REQUIRE 2" RECESS IN FLOOR FOR
HANDICAP ACCESSIBILITY


WE RECOMMEND A FLOOR
DRAIN AT THE ENTRANCE
TO THE SHOWER.

SHOWER CABINET INSTALLATION INSTRUCTIONS



SC SERIES SHOWER INSTALLATION

- # $\frac{1}{4}$ x $\frac{1}{2}$ " Stainless Steel Screw (TYP)
- 8 Required for Top Cap
- Use $\frac{13}{16}$ " Drill Bit

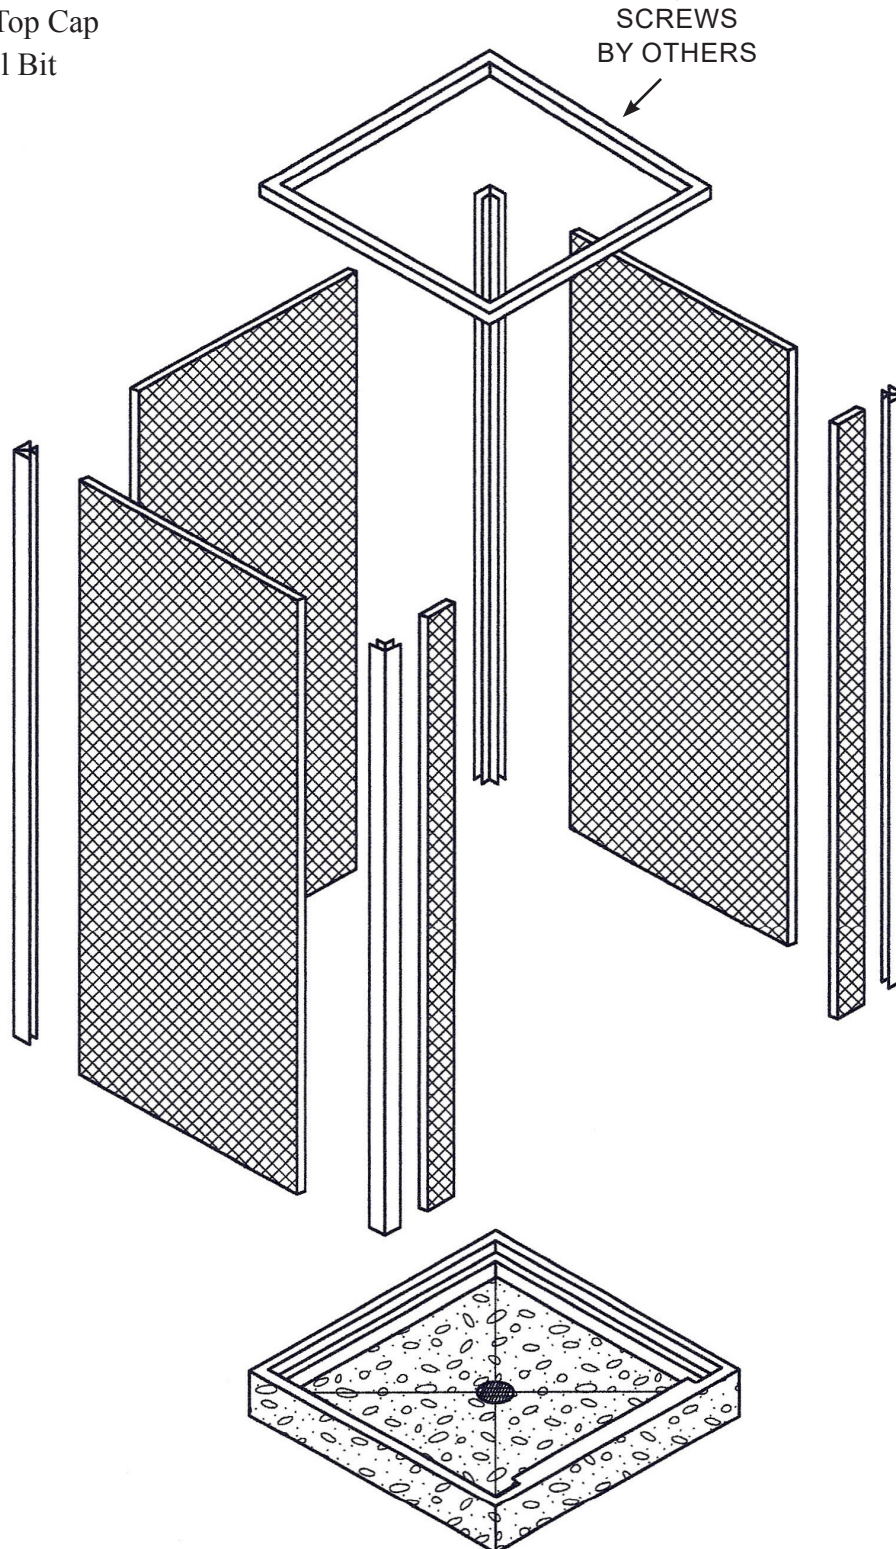


SHOWER CABINET INSTALLATION INSTRUCTIONS




JOINT STRIP FOR THE HSC SERIES SHOWER

- Holes drilled by installer
- **Notched left or right hand by installer

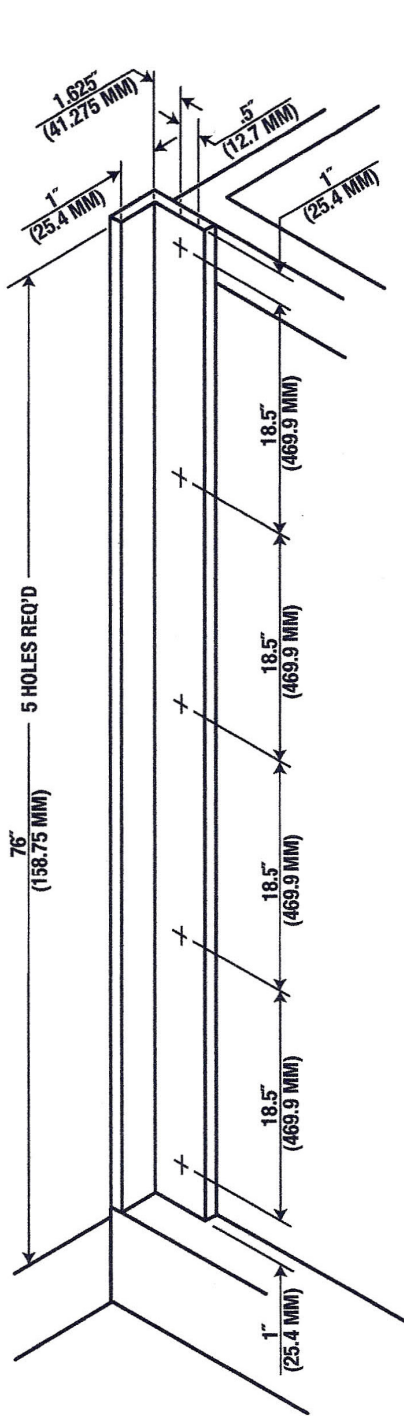

BACK FILLER STRIP — SC-7

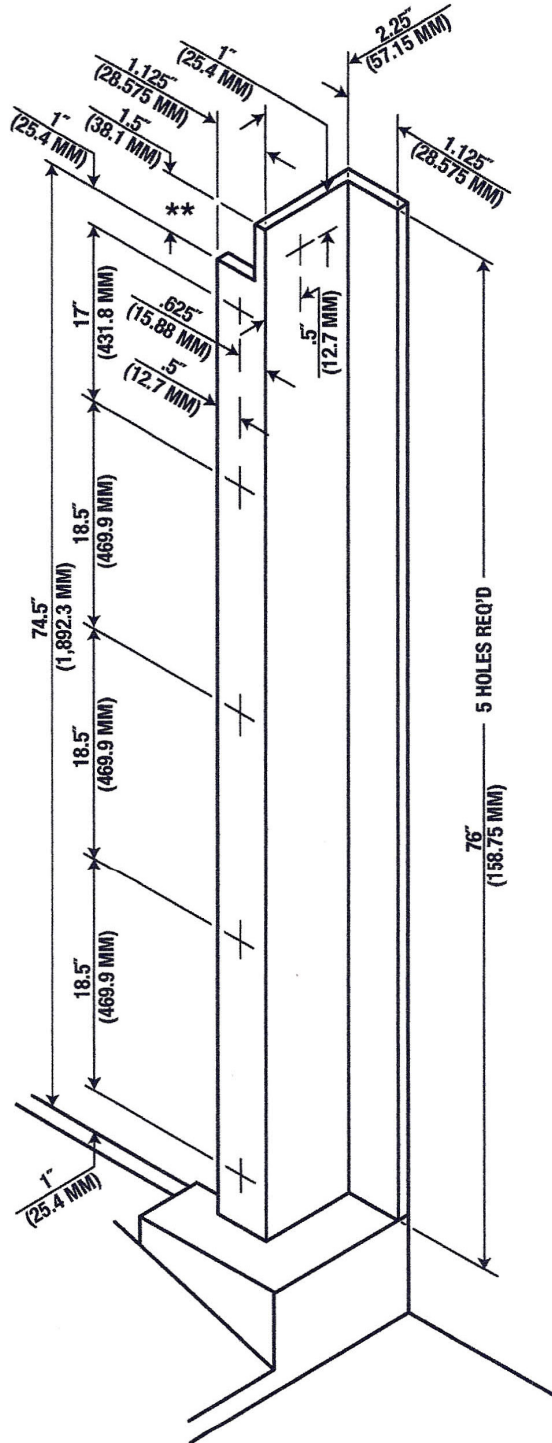

FRONT FILLER STRIP — SC-6

SHOWER CABINET INSTALLATION INSTRUCTIONS



CARE & MAINTENANCE

Your shower cabinet may be kept sparkling and bright by using a mild household cleaner, such as Janitor in a Drum, Spic and Span or one of the tub and tile spray cleaners. DO NOT use abrasive powders or scouring pads to clean wall surface, this may scratch and damage the shower walls. Avoid using sharp scrapers when removing matter from walls, this can be accomplished with plastic scrapers or a wooden stick. Your shower cabinet may be further protected with a periodic light coat of marine type wax.

By providing this care, you will maintain your shower cabinets' quality appearance.

Touch up paint is furnished for small repairs.